

## Datalogic S.r.l.

Via San Vitalino 13  
40012 Calderara di Reno (BO)  
Italy  
Tel. +39 051 3147011  
Fax +39 051 3147205

### ©2023-2024 Datalogic S.p.A. and/or its affiliates

All rights reserved. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates.

Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Electronic versions of this document may be downloaded from the Datalogic website ([www.datalogic.com](http://www.datalogic.com)). If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact" page.

### Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material. Datalogic reserves the right to change any specification at any time without prior notice.

### Trademarks

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

## HAND TRIGGER & LANYARD

### INSTRUCTION MANUAL



**DATALOGIC**

## CODiScan Accessories

### ©2023-2024 Datalogic S.p.A. and/or its affiliates

• All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

[www.datalogic.com](http://www.datalogic.com)



822004680 (Rev. A) January 2024

## CODISCAN ACCESSORIES

CODiScan HS7600 can be used in standalone mode or in conjunction with the following accessories to extend user comfort:

- HT1-HS7600KR: Adjustable Right Hand Trigger
- HT1-HS7600KL: Adjustable Left Hand Trigger
- LH-HS7600: Extensible Lanyard for Neck and Belt




**NOTE: The adjustable hand trigger has a different part number for right-and left-handed users. Choose the part number that best suits your needs.**

The following spare parts are available for purchase:

- HT5-HS7600KR: Adjustable Right Hand Trigger - 5 Pcs
- HT5-HS7600KL: Adjustable Left Hand Trigger - 5 Pcs
- SG5-HS7600KR: Spare Right Fabric - 5 Pcs
- SG5-HS7600KL: Spare Left Fabric - 5 Pcs
- ST1-HS7600K: Spare Trigger System (No Fabric) - 1 Pc
- ST5-HS7600K: Spare Trigger System (No Fabric) - 5 Pcs
- SS5-HS7600K: Spare Fabric - Adjustable Strap Only - 5pcs

### PARTS OF THE GLOVE

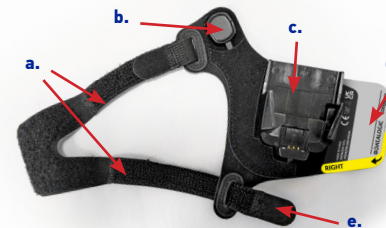

a) Adjustable Straps	d) Closing strap
b) Trigger	e) Washable Fabric
c) Holder	

### WEARING THE HAND TRIGGER

Before wearing the hand trigger, make sure to choose the right part number whether you are right- or left-handed.

To wear the hand trigger:

1. Put on the hand trigger on top of your hand and, while holding the trigger in place with the thumb, fasten it using the closing strap.
2. Adjust the size to comfortably fit your hand using the adjustable straps.
3. Adjust the position of the trigger to reach it easily with your thumb.




**NOTE: After the first time, use only the closing strap to wear the hand trigger.**



## USING THE HAND TRIGGER

When reading a barcode, press lightly to activate aiming system, press fully to activate reading.

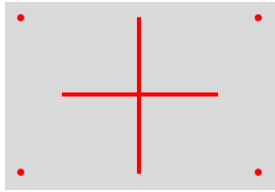

Aiming system

## MAINTENANCE AND DISPOSAL

The electronic parts are detachable from the fabric to allow:

- washing/changing the fabric
- changing the trigger
- disposing of the different parts



**WARNING: Remove the trigger and the electronic parts before washing the fabric.**

To remove the holder and the trigger from the fabric, lift the piece of fabric covering the cable as shown below and detach the parts.



To re-assemble the hand trigger, first place the trigger, then the cable under the piece of fabric and lastly the holder.



**NOTE: Wash the fabric parts at 30 °C. Air dry.**

## LANYARD

The LH-HS7600 extensible lanyard can be used in two ways:

- Worn on the neck.
- Attached to a pocket or a belt by detaching the lanyard from the retractable reel.

The lanyard can be extended for ease of use as shown below.



The LH-HS7600 extensible lanyard also has a safety clip on the back side.



Safety Clip

The portable holder can be associated with a type-C USB cable 94A050044 (not included) and/or the power supply 94ACC0196 for charging, firmware updates and device configuration.



## REMOVING THE DEVICE FROM THE PORTABLE HOLDER

To remove the device from the portable holder, push the device with your thumb, using your other hand to prevent the device from falling.



**NOTE: Push with your thumb perpendicular to the device as shown in the picture below. Do not push diagonally.**

